



VB-SEMI-AIR

making everyday smoother



airsuspension



- Increased comfort • Better driveability • More safety



RENAULT MASTER
OPEL/VAUXHALL MOVANO

NISSAN NV400

FWD - RWD - DRW X62 2010>

PRODUCT SHEET

PRODUCT SHEET

Auxiliary suspension systems, like the VB-SemiAir, offer the possibility to control any suspension problems oneself (within the limits of the suspension travel). An air-spring (bellow) is fitted between the chassis and rear axle, on each side of the vehicle. This air-spring supports the existing leaf spring. The basic-kit is the start of changing and improving the suspension of your vehicle and consists of the air-springs, airtubes, two inflation valves and all necessary fixing materials.

The VB-SemiAir is supplied as a dual chamber system, meaning the two air-springs are not connected to each other. Making use of a dual chamber system allows left and right to be separated, which allows the vehicle to be levelled when it is loaded unevenly. The basic-kit can also be upgraded into a comfort-kit.

The comfort-kit contains all of the above, plus a control panel with two pressure gauges, comfort switches, fitting material and compressor-kit. For details, see VBSA-X62-XXX-01B (seat fitting) and the VBSA-X62-XXX-01C (dash fitting). The compressor included in these comfort kits should be fitted under the driver's seat.




VBSA-X62-XXX-01C

VBSA-X62-XXX-01B

- Dual chamber (air-circuit) system as standard
- All connection- and fastener-materials included
- Original leaf spring is retained
- 'Plug-and-play' system results in quick and easy installation
- Improves ride comfort and provides easy levelling of the vehicle when it is laden heavily or unevenly
- Recommended for motorhomes, service vehicles and vehicles with heavy, or off-centre, loads
- Also available as a comfort-kit with either a dashboard-mounted (VBSA-X62-XXX-01C) or driver's seat-mounted control panel (VBSA-X62-XXX-01B)


Dealer:

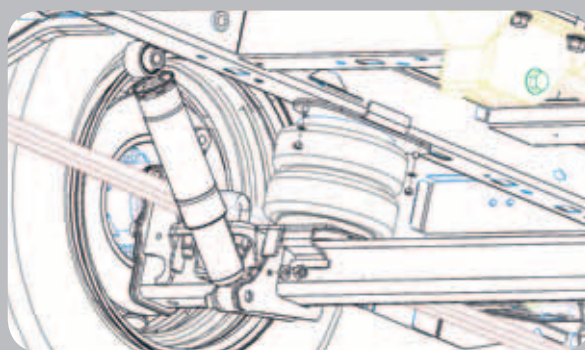

Basic system 1550304100

The basic-kit consists of;

- 2 x Air-springs 7,5"
- All necessary brackets, connection- and fastener-materials
- Air tubes
- 2 x Inflation valves
- User manual
- Installation instructions

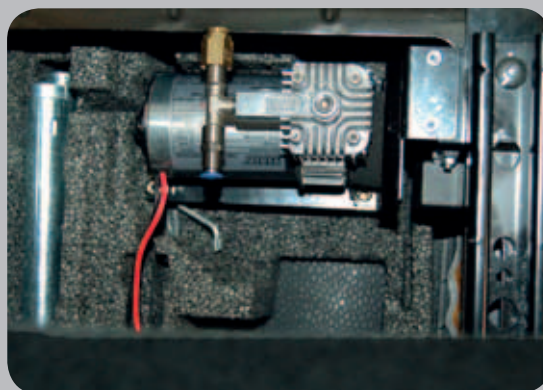

Compressor

Product description	Partnumber
VB-SemiAir auxiliary air-suspension system	FWD; 1550722100
	RWD; 1550723100
	DRW; 1550724100
VB-SemiAir auxiliary Basic-kit + Comfort-kit (Dash operation with compressor)	VBSA-X62-FWD-01C
	VBSA-X62-RWD-01C
	VBSA-X62-DRW-01C
VB-SemiAir auxiliary Basic-kit + Comfort-kit (Driver's seat operation with compressor)	VBSA-X62-FWD-01B ¹
	VBSA-X62-FWD-1BUK ²
	VBSA-X62-RWD-01B ¹
	VBSA-X62-RWD-1BUK ²
	VBSA-X62-DRW-01B ¹
	VBSA-X62-DRW-1BUK ²

¹ LHD ² RHD (UK)